


# CHG 238

Multiple Battery Charger

## INSTRUCTIONS FOR USE AND CARE



**12 Unit Charger. For use with BAT AP97A NiMH Rechargeable Batteries.**

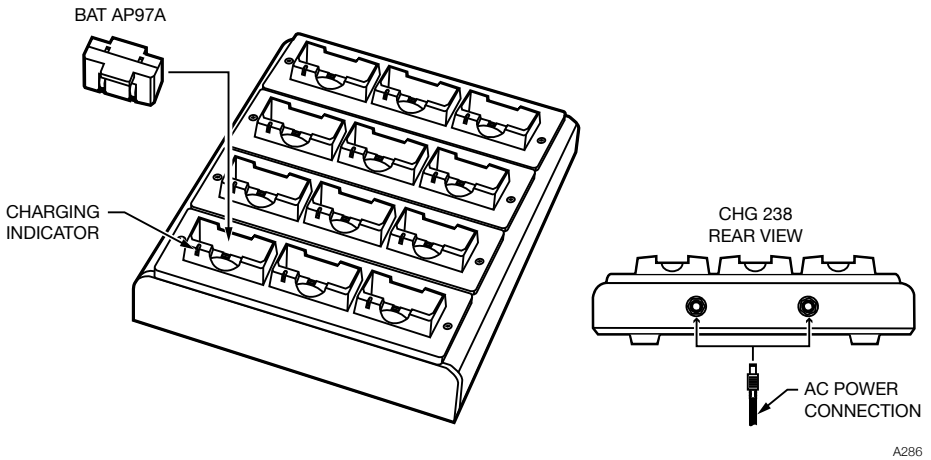

1. Plug the TFP 024 power supply into the AC wall outlet. Plug the power connector into either jack on the rear of the CHG 238 unit (above).

**Warning: Do Not Attempt To Charge Non-Rechargeable Batteries.**

Non-rechargeable batteries, such as alkaline and carbon zinc, may heat up and burst, causing possible injury and damage to the equipment.

2. Insert the AP97A NiMH rechargeable battery into the charging dock as illustrated in Figure A above. A red LED indicator will illuminate when charging has started (Figure A).
- You may charge up to 12 battery units per CHG 238 charger.
  - Approximately 14 hours to fully charge the batteries.

## Specifications

### CHG 238 Multiple Battery Charger

<b>Size:</b>	6" x 5 3/4" x 1 3/4" (150 mm x 145 mm x 45 mm)
<b>Weight:</b>	535g (1.18 lbs) with power supply
<b>Color:</b>	Black
<b>Power Input:</b>	115 AC input
<b>Power Supply:</b>	AC adaptor, 12VDC - 200 mA
<b>Charging Rate:</b>	Overnight Charge: 14 mA Trickle/Maintain: 8 mA
<b>Charging Time:</b>	14 hours nominal
<b>Unit Capacity:</b>	12 Units
<b>Indicators:</b>	Individual Charging Indicators: Red LEDs

## Recycling Instructions

Help Williams Sound protect the environment! Please take the time to dispose of your equipment properly.



### **Product Recycling for Customers in the European Union:**

Please do NOT dispose of your Williams Sound equipment in the household trash. Please take the equipment to a electronics recycling center; OR return the product to the factory for proper disposal.



10300 Valley View Rd • Eden Prairie, MN 55344  
800-328-6190 / 952-943-2252 • FAX: 952-943-2174  
[www.williamssound.com](http://www.williamssound.com)